



ISQ 5 · ISQ 5-LO IMPAC-Pyrometer

使用说明书

<image>

Proven Quality



3 设备介绍

ISQ 5光电高温计采用24V DC ± 25%电源供电;模拟量输出有0...20mA 或者 4...20mA; 数字接口有RS 232 或者 RS 485接口。

数据电缆接口线接头颜色及功能:

Pin	Color	Indication	A		
K	白线	+24 V DC power supply 接24V+	11		
Α	棕线	0 V DC power supply 接24V-(0)			
L	绿线	+ I _{out.} analog output 模拟量输出+			
В	黄线	- I _{out.} analog output 模拟量输出-	3		
Н	灰线	Targeting light activate / deactivate via external switch	3		
J	粉红线	see 3.1.1 : external clearing of max. value storage or hold function Only pyrometers with PID-controller (controller activated): set controller output to 0% (emergency stop)	connector		
G	红线	DGND (RS232) or S (RS485) (GND for interface)			
F	黑线	RxD (RS232) or B1 (RS485)			
С	蓝紫线	TxD (RS232) or A1 (RS485)			
D 灰色/粉红线B2 (RS485) (bridged with F)					
Е	红/蓝线	A2 (RS485) (bridged with C)	Pin assignment		
М	橙色线	screen only for cable extension, don't connect to the switchboard	(side of male inserts)		

3.1 Connector pin assignment on the back of the pyrometer

Pin	Color	Indication
Κ	white	+24 V DC power supply
А	brown	0 V DC power supply
L	green	+ I _{out.} analog output
В	yellow	– I _{out.} analog output
Н	gray	Targeting light activate / deactivate via external switch
J	pink	see 3.1.1 : external clearing of max. value storage or hold function Only pyrometers with PID-controller (controller activated): set controller output to 0% (emergency stop)
G	red	DGND (RS232) or S (RS485) (GND for interface)
F	black	RxD (RS232) or B1 (RS485)
С	violet	TxD (RS232) or A1 (RS485)
D	gray/pink	B2 (RS485) (bridged with F)
Е	red/blue	A2 (RS485) (bridged with C)
М	orange	screen only for cable extension, don't connect to the switchboard



7 参数设置

高温计的参数可以在使用时根据需要设置,设置参数时请先关闭高温计电源,然后旋下高温计数据电缆, 在高温计的背部有两个内六角螺丝,采用随机器配置的螺丝刀轻轻旋开这两个内六角螺丝,然后慢慢取下后盖 这个过程请小心,因为后盖和高温计主体有数据插口,以免损坏。

中文描述:



原英文描述:



7.1 模拟量输出设置

当右侧拨码开关在ON位置时,模拟量输出为0...20mA; 在OFF位置是,模拟量输出为4...20mA。





7.5 辐射率坡度系数设置K = ε1 / ε2

ISQ 5光电高温计采用双色技术,虽然不像单色技术那样,测量结果受被测材料的影响 非常大,但是在具体的使用时,还是根据测试材料的不同有细微的影响。

Settings:
0.9 (0.8)
÷
1.099 (1.25)

我们可以通过调节辐射率坡度系数K , 使之达到比较精确的读数。

坡度系数K的设置可以打开后盖调节采用离线方式调节,也可以才数字接口连接电脑采用软件调节。

打开后盖采用离线方式, 坡度系数K的调节范围为: 0.900 - 1.099;

连接电脑采用在线方式,坡度系数K的调节范围为:0.800 - 1.250。

下面为打开后盖采用离线设置方式:

如下图所示,后盖内左侧有个拨码开关,右侧有两个数值调节开关;代表的是参数K的最后两位数字。 如果左侧的拨码开关置于0.9XX处,那么K值设置为0.9XX,后面两个参数的设置值就是0.9XX的最后两位数值。 如果左侧的拨码开关置于1.0XX处,那么K值设置为1.0XX,后面两个参数的设置值就是0.9XX的最后两位数值。



具体设置时,需要多试几次,如果偏高或偏低,则反方向调节数字,直到高温计输出的温度达到需要的数值为止。

上海麦兴仪器设备有限公司

Shanghai MaxSun Industrial Co., Ltd. 地址:上海市浦东新区张杨路188号汤臣中心A座2406室 邮编:200122 电话:(86 21) 5888 6718 / 133 8186 8102 传真:(86 21) 5888 7876 邮箱:mx@imaxsun.com

麦兴(中国)有限公司 MaxSun (China) Limited. 地址:香港湾仔告土打道151号国卫中心11楼 电话:(852) 2836 8361

传真 :(852) 3011 5863 邮箱 :mx@imaxsun.com